Crane Partner As





RDCP

Wireless Windows-based software that allows the operator full remote control of the loadcell. Can be set to datalog (time/date and load) into a spreadsheet by user input time interval (min 3 hertz).

A spare USB port is required.



Straightpoint					
Loadcell 1	· Zero	Loadcell 2	Zero	Loadcell 3	· Zero
00.00	0	00.000		00.00	0
Leadcell 4	Zero	Total Load	Zero	_	2
	Ü			ctraigh	tnoint
				straightpoint	

T24LOG24


This software for Windows PC's allows up to 24 of our wireless loadcells (Radiolink or Wireless Loadshackles) to be viewed and logged cable free to a CSV file. You can configure the number of loadcells (max 24), and set extra channels to sum data or record peaks etc.

These configurations can be saved and re-loaded at any time.



T24-SOSD

125mm high red LED slave display that will wirelessly display the load on a Radiolink. Suitable for mounting on a crane gantry, requires mains power.

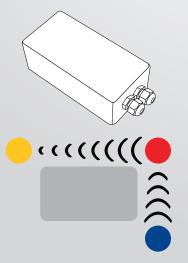

T24-AR

The T24 Active Repeater module will enable the T24 range of acquisition modules to span around obstacles or increase range or coverage.

